

Desolv[™]Cleaning Kit

USER INSTRUCTIONS


Code	Description	Qty.
82560	Desolv Kit / 2 single-use Funnel Bags	1
82562	Single-use replacement Funnel Bags	10
82565	Desolv Solution (1 gallon)	4

Kit Includes


- Desolv Cleaning Solution (1 gal.)
- C-Band Frame Assembly
- Single-use Funnel Bags (2)
- Wedge Sheets (2)
- Cleaning Brush (1)
- Drain Pail (5 gal)
- · Installation Instructions




- 1. Slide Center Insert between wall and top of indoor unit.
- 2. Route Red Cords around both sides of unit. It's ok if cords go behind unit.
- 3. Attach Metal Ring to Center Insert Clip ▼

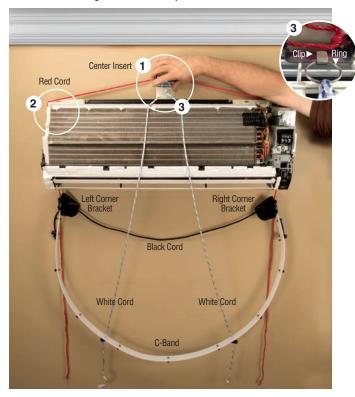


4. Slide Left & Right Corner Brackets under back corners of the unit. Tighten Corner Brackets by pulling Red Cords through the Cord Locks. Secure Corner Brackets together by tighten Black Cord and securing with Cord Locks. ▼

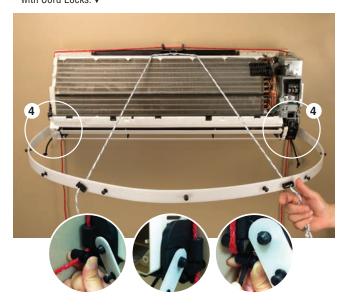


5. Lift the C-Band up into position by pulling White Cords through the Cord Locks. ▼

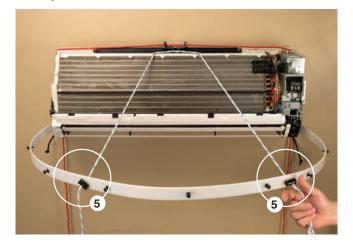

6. Attach the single-use Funnel Bag to the frame by rolling it over the C-Band from the inside. Secure the mounting holes in the bag to the mounting studs along the C-Band. **V**

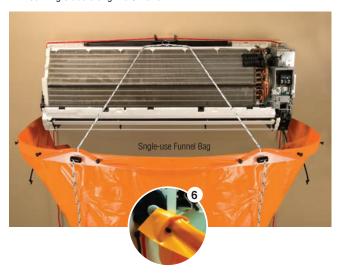


7. Raise and pull Rear Flap of the single-use Funnel Bag up and over the Black Cord. Spread flap along Black Cord to cover full length of unit. 8. Use the Wedge Sheets to wedge the Flap of the single-use Funnel

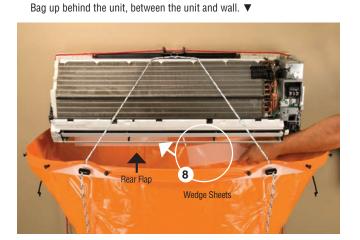

9. Cut the drain tube of the single-use Funnel Bag to the proper length and drop it into bottom of Drain Pail. V



10. Apply Desolv Cleaner per instructions. If necessary use cleaning brush (included with kit) ▼

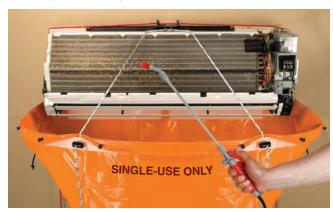



U.S. Patent No. 6,863,116 Under license from Crossford International LLC After cleaning, unhook C-Band with the single-use Funnel Bag attached. Roll entire assembly into Drain Pail. Remove Drain Pail outdoors and separate the bag from the frame.

Keep reusable frame and brush. Replacement Funnel Bags are for single use only. Properly dispose of diluted solution in accordance with local, state and federal regulations.

Single-use Funnel Bags can be purchased separately.



Contact: RectorSeal® 2601 Spenwick Drive, Houston, TX P 713-263-8001 800-231-3345 F 713-263-7577 800-441-0051

www.rectorseal.com

© 2015 RectorSeal® Inst/D-D-15